


Fastening Information for Xci Ply, Xci Py (Class A), and Xci NB in Wood Stud Walls

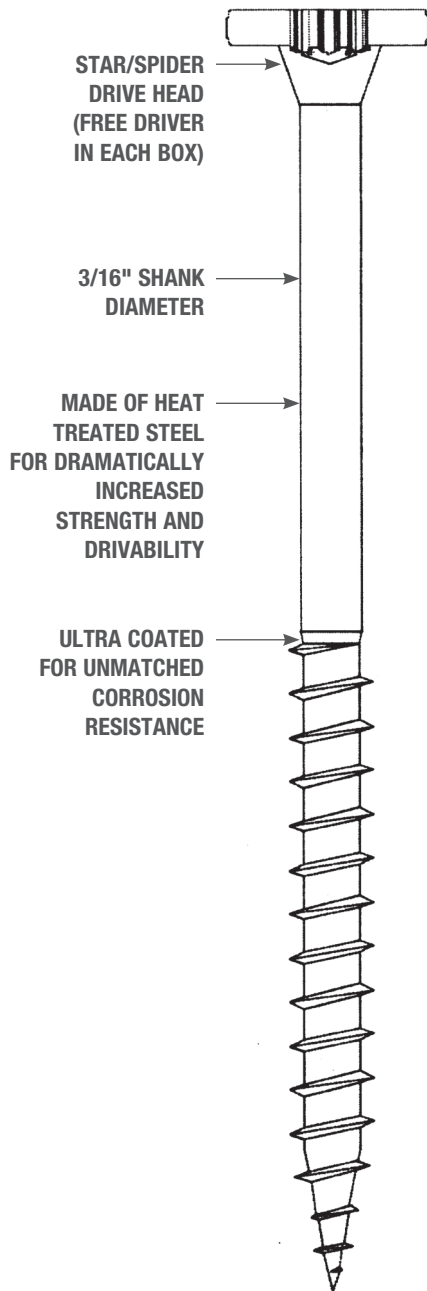

Hunter Panels **SIP/WD** Fastener is intended to mechanically attach Hunter Xci NB, Hunter Xci Ply or Xci Ply (Class A) to wood studs or wood framing. They can also be used for concrete and CMU applications with pre-drilling. Hunter Panels SIP/WD Fastener has the following features:

- FM approved—plates not required
- Star/spider head eliminates need for washer and offers dramatically increased pull-out value
- 100% American made
- Fast, one-step installation
- No pre-drilling
- Multiple bits included in each pail

Test Description	Typical Value
Pull-through (lbs):	
7/16" OSB	630
Pull-out (lbs):	
1/2" plywood	442
5/8" plywood	459
3/4" plywood	710
Douglas Fir (1" pen.)	768

Fasteners should never be struck with a hammer during installation.

Physical Data Chart

Head Diameter	.625"
Thread Diameter	0.240"
Shank Diameter	0.190"
Fastener Length*	3", 3½", 4", 4½", 5", 5½", 6", 6½"

* Consult DrJ TER 2102-05 for recommended fastener spacing.

- **Minimum penetration into wood, concrete, and CMU is 1.5".**

For more information on these products, visit www.hunterpanels.com.

Hunter Panels | 15 Franklin St, Portland, Maine 04101 | 888.746.1114 | www.hunterpanels.com

NEW YORK ILLINOIS FLORIDA TEXAS UTAH PENNSYLVANIA WASHINGTON